
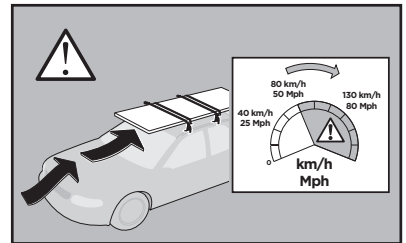
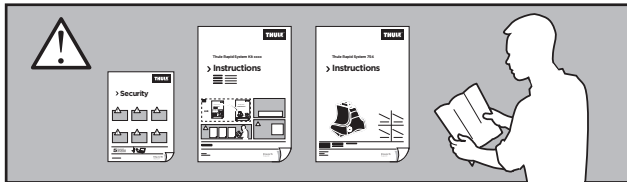
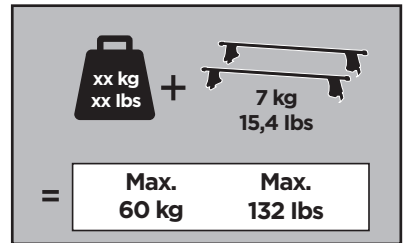


# Thule Rapid System Kit 1326

# > Instructions

**MAZDA 3**, 5-dr Hatchback, 04-08

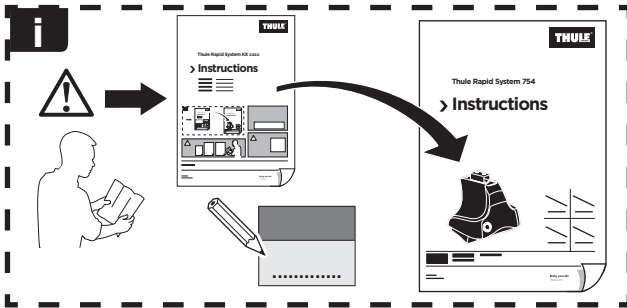

ISO 11154-E

**141326**


C.20130117  
519-1326-01

**Bring your life**

thule.com



93 x4




604 x2



x1






605 x2



x1

# 1



	X (scale)	X (mm)	X (inch)
<b>MAZDA 3</b> , 5-dr Hatchback, 04-08	<b>37</b>	<b>1021</b>	<b>40 1/4</b>

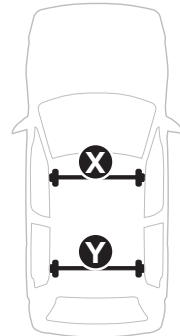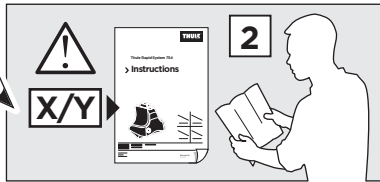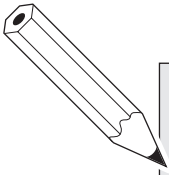



	Y (scale)	Y (mm)	Y (inch)
<b>MAZDA 3</b> , 5-dr Hatchback, 04-08	<b>35,5</b>	<b>1006</b>	<b>39 5/8</b>

**2**

**MAZDA 3**, 5-dr Hatchback, 04-08

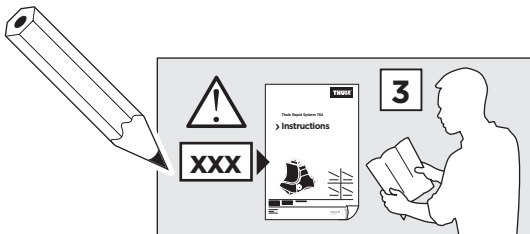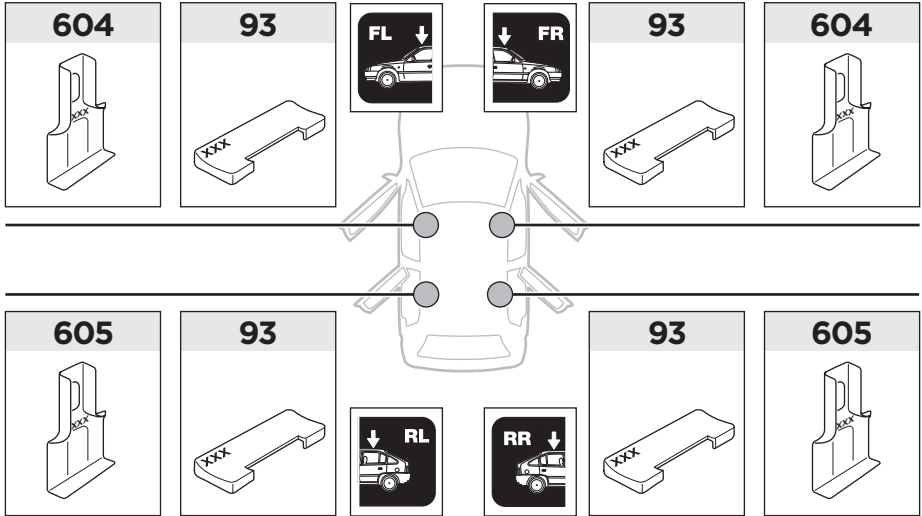

3

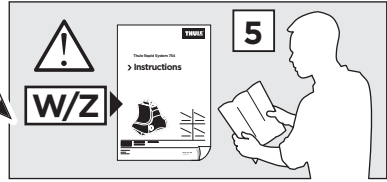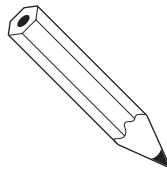

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>MAZDA 3</b> , 5-dr Hatchback, 04-08	<b>270</b>	<b>700</b>	<b>8 1/8</b>	<b>27 1/2</b>

